


## Site Preparation & Delivery

Edition: July 2018

### 10,200ltr Concrete Water Tank (500kg lid capacity)

Engineer designed and certified for in-ground and above ground use. Lid not suitable under soil and turf.

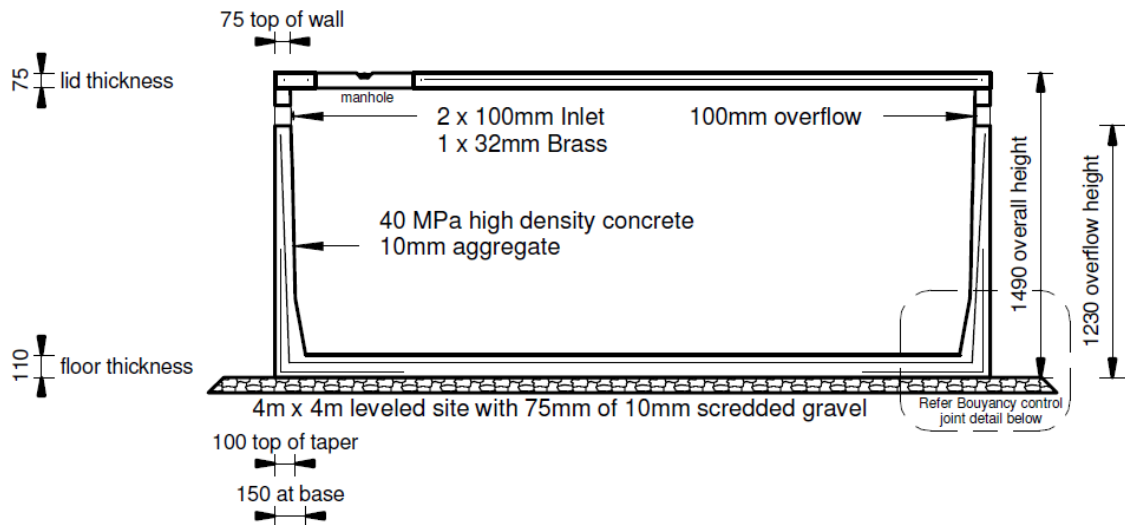

	WEIGHT (T)	CAPACITY (L)	DIAMETER (M)	TOTAL HEIGHT (M)
HD 10200 (squat)	6.8	10,200	3.5	1.49

**DO NOT USE SAND, CRUSHER DUST OR ROAD BASE BELOW TANK – WILL VOID WARRANTY**

Levelling your excavation and 10mm gravel are the most two important things you can do to ensure the life of your unit. Failure to do so will void warranty.

#### Excavation & Site Prep Instructions:

1. Prepare clear access for rear mounted crane truck (3.5m wide x 10m long x 26T).
2. Excavate 4mx4m level hole to required depth.
3. Ensure no high spots or protruding rock in the base of the excavation.
4. Place 75mm layer of 10mm gravel into excavation.
5. Screed perfectly level with straight edge and spirit level.
6. Tank is craned into excavated area (reach with crane truck is 4m from centre of crane to centre of tank).
7. Back fill with excavated material with no large rocks (200mm plus).
8. Ensure tank is filled with water to 70% capacity (failure to fill tank may cause your tank to float! Allcast Precast takes **NO RESPONSIBILITY** for floating tanks).

#### Handy tips for a smooth install:

1. Delivery is by rear mounted crane truck which delivers over the rear – NEVER OVER THE SIDE.
2. Check for low weight limit bridges or other hazards on your street or delivery area.
3. Check the dimensions of your access for height and width, starting at the street.
4. How wide is your front gate?
5. Underground plumbing, or septic trenches in the access?
6. Piles of timber or other materials in the 7m zone at the rear of the truck? Large overhanging trees or power lines in the access or craning area?
7. Beware electrical hazards for unloading purposes:
  - a. 7 meters minimum clearance under insulated wires
  - b. 10 meters minimum clearance under non-insulated wires

**Otherwise power must be off.**

**If you have any further questions please call Allcast Precast on 07 5442 2522.**

40 Hill Street, Woombye QLD 4559

e: admin@allcastprecast.com.au | w: www.allcastprecast.com.au

